VOID REMOVER & CLEANER

Description	DEEP CLEANER is a powerful, water washable, solvent free remover and cleaner that strips out new, old and encrusted oils from exterior wooden surfaces and cleans severely weathered wood. Biodegradable, DEEP CLEANER is suitable for environmentally sensitive areas, while its gel consistency means it will not run, making it ideal for vertical surfaces. Easy to apply and fast acting, DEEP CLEANER quickly and efficiently removes the mill glaze, which is created in the manufacturing process, from the surface of new wood, thus improving the penetration and adhesion of a finish.
Properties	 Removes Teak and other oils from woods, blackened by UV rays. Water washable - Oils are dissolved in water. Deep cleans severely weathered wood. Removes Mill glaze - Improves the penetration and bonding of a finish. Fast Acting - Works in as little as 5 minutes. Ready to use. Easy application. Removes lubricating oils and stains. Biodegradable - Does not contain solvent or paraffin.
Basic uses	 Exterior use only. All exterior wood - Softwoods, Hardwoods - Exotic and Broad Leaved. Exterior wood surfaces - Decks, Handrails, Trim Horizontal and Vertical surfaces.
Technical data	 Biodegradability: Easily Biodegradable. Certificate Number: OECD 301 F. Appearance: Blue-green, disinfectant odour. Physical State: Viscous liquid. Specific Gravity at 20°C (68°F): 1.03 ± 0.05. Viscosity: Gel structure. Flammability: Not classed as flammable. Container Size: 2,5L. Shelf Life: 18 months in original unopened packaging. VOC: < 0.05% (0.5g/L).
Application tools	Synthetic brush. Synthetic scrubbing brush. Synthetic roller cover.
Good application practice	Always carry out a preliminary test prior to commencing the job, to determine the contact time necessary for stripping or cleaning the wood. See "Test Procedure" below. When stripping or cleaning areas that have caulking, ALWAYS carry out a test by applying DEEP CLEANER to a small area and allow it to sit for 20 minutes before scrubbing and rinsing off to determine that there is no reaction. Wear chemical resistant gloves, safety goggles and protective clothing. Always treat stripped and cleaned surfaces with DECK CLEANER* to neutralise the surface and restore the woods colour. Woods rich in tannins e.g. Cedar, Oak, Teak, Mahogany may darken with DEEP CLEANER. Where DEEP CLEANER has darkened the wood DO NOT allow it to dry, prior to using DECK CLEANER*. Cover and protect everything you do not wish to strip or clean, including any aluminium surfaces. When stripping or cleaning vertical surfaces, work from bottom to top to avoid streaking. Apply between 5°C (41°F) and 35°C (95°F). Do not apply in direct sunlight or to a hot surface. Do not allow DEEP CLEANER to dry on the surface. If drying occurs dampen with a mist application of water. Consult us for additional information and advice prior to using DEEP CLEANER on Oak and Chestnut.
Surface preparation	Remove any loose and flaking finish. Brush off any physical surface contamination e.g. moss, general dirt etc.

Application	Use as is, Do Not dilute. Work large areas in zones. Always work in direction of the grain. Do Not use a wire brush. After rinsing, immediately treat surface with DECK CLEANER* while still wet. Allow wood to dry thoroughly, 2-3 days, before refinishing. Test Procedure Apply DEEP CLEANER Allow to work 5 minutes. Scrub surface to see if finish or dirt is lifting. If lifting commence with job, if not wait a further 5 minutes and test again, continue this process up to a maximum of 20 minutes. Stripping and Cleaning Work in areas that can be completed in 5-20 minutes, then move on to the next area until entire surface is stripped or clean. Apply DEEP CLEANER to the area to be stripped or cleaned and allow to work. After time established in the test, scrub surface with a stiff scrubbing brush, if required flush with water at the same time OR use a pressure washer (max 60 bars/870 psi). Thoroughly rinse the surface after stripping/cleaning including any adjacent areas, with fresh clean water. NB: The use of hot water makes the job easier. Removing Mill Glaze Apply DEEP CLEANER to the area to be treated. Allow to work 15 minutes. Scrub surface with stiff scrubbing brush, if required Rush with water at the same time OR use a pressure
	washer (max 60 bars/870 psi). After removing the mill glaze, thoroughly rinse the surface including any adjacent areas with fresh clean water. Consult us for additional information and advice prior to using DEEP CLEANER on Oak and Chestnut.
After stripping/cleaning	Always apply DECK CLEANER* to neutralise the surface and restore the wood's colour.
Coverage	4m ² (43ft ²) per litre. Actual coverage will vary depending on application method, type, texture, age and porosity of the wood.
Clean-up	Water.
Storage	Store unused product in original container only. Do not store in metal containers. Keep from freezing and high temperatures.
General information	Every care is taken to ensure that the information provided in this technical data sheet is accurate. Owatrol International is unable to guarantee results as we have no control over the conditions under which our products are applied. For further advice and information please contact our technical department by email at info@owatrol.com or the local Owatrol Agent for your country. The information above is correct at the date of issue. All other OWATROL products named in this document should be used as per label instructions and the technical data sheet.
Safety	Refer to the safety data sheet (MSDS) available at www.owatrol.com and text on the packaging. Keep out of the reach of children.
Issue date	May 2018

* Same manufacture.

Owatrol Marine is a trademark



Find all our solutions: WWW.OWatrol.com